

## How to Install ZeroClearance®

### ZeroClearance®

With ZeroClearance®, a cooler, quieter ride is just three steps away. A measuring tape, permanent marker and metal scissors are the only tools you'll need. Click for a more detailed look at the installation process.

#### Step One:

Prepare the installation area. To ensure the strongest bond possible, thoroughly clean the entire surface to which ZeroClearance® will be adhered and allow the surface to dry. Do not place ZeroClearance® directly on a heat source.



**Step Two:**

Take precise measurements of the hotspot/target area. Using metal scissors, cut ZeroClearance® to your desired dimensions.




**Step Three:**

ZeroClearance's pressure-sensitive adhesive makes installation a snap. Simply remove the paper backing and firmly press the material into place. But be careful, the adhesive is strong and adheres very quickly. Make sure that aluminum side faces the heat source.



**You're Done!**

That's all there is to it. Enjoy your cooler, quieter ride!

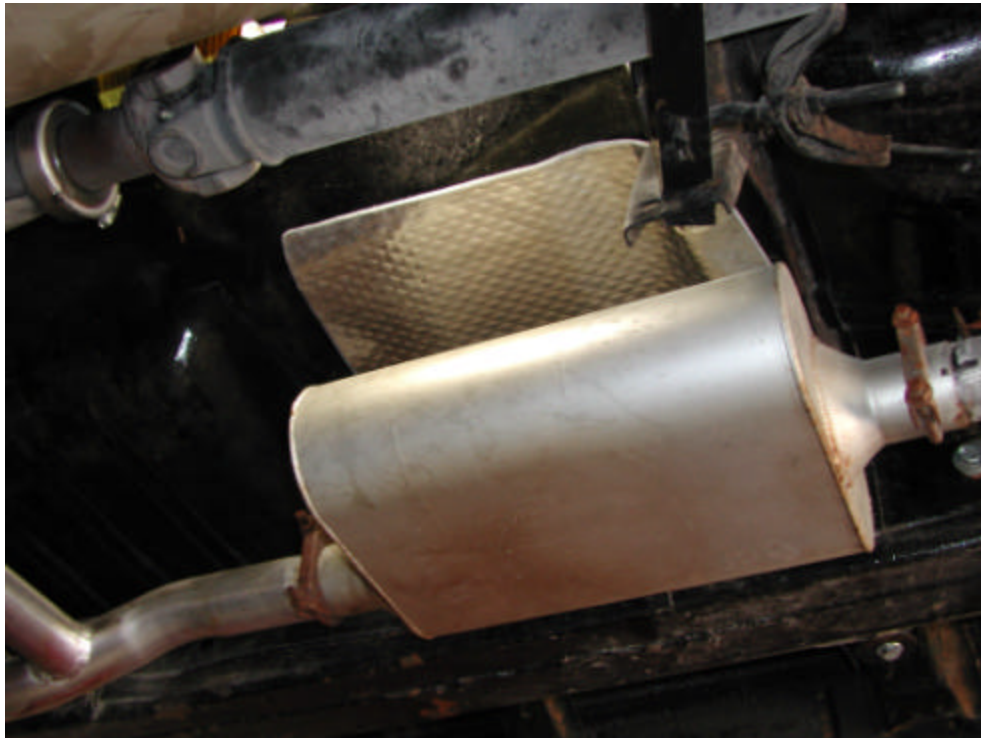

To contact CoolAndQuiet.com  
visit our contact page at:  
<http://www.coolandquiet.com/contact.cfm>

Or call:  
1-800-260-3351